


Storing, Packing and Shipping Your English XL VIT

The English XL VIT soft carrying case is designed to fit only the instrument in the center compartment and its necessary accessories in the outer pouches. If you put other objects in the case with the meter, you risk damaging your instrument during shipment.

When shipping your English XL VIT for annual Instrument Calibration, remove everything except the meter from the carrying case. Your calibration tile and sander should be bubble wrapped and placed in the same packing box, but not in the soft case with the meter. Put the slipmeter in the soft case with the mast set to 0.05 slip resistance on the protractor (nearly vertical). Do not ship CO2 to when you send your machine for Instrument Calibration.

Install the foam piston bracket protector and stretch a thin rubber band around the ankle spring and attach the other end of the rubber band to the bolt under the pressure gauge to prevent damage to the test foot assembly.

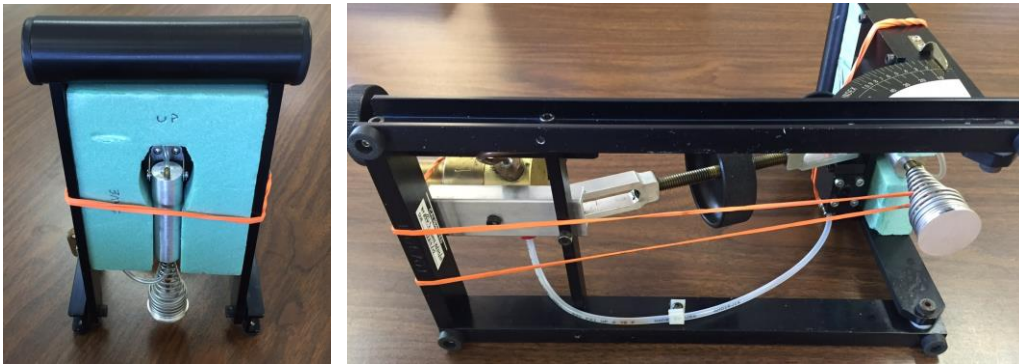

Put the slipmeter in the soft case with the mast set to 0.05 slip resistance on the protractor (nearly vertical).



Fill the space in the soft case over the instrument with bubble wrap or air pillows to keep the meter seated at the bottom of the case. Your calibration tile and sander should be bubble wrapped and placed in the same packing box, but not in the soft case compartment with the meter.



Snap the case closed and put it in a box with enough packing materials such that nothing moves when shaken. The boxes we use when not shipping a sander are 16x10x8 inches, with a layer of bubble wrap in the bottom of the box.



The boxes we use when shipping a sander are 20x10x8 inches, with a layer of bubble wrap in the bottom of the box, and ample bubble wrap or air cushion to separate the sander box (white, 8x8x2 inches) and the nylon instrument case.



EXCEL TRIBOMETERS, LLC

237 Hanbury Road E, Suite 17 PMB 254
Chesapeake, VA 23322

service@exceltribometers.com | www.exceltribometers.com

PHONE: 757-897-2853 | FAX: 888-804-3727

© EXCEL TRIBOMETERS, LLC. All Rights Reserved Worldwide. You may print this information for your personal use, but no part of this document may be otherwise reproduced in part or in full in other publications without the express, written approval of EXCEL TRIBOMETERS, LLC.